



SIMPLE SET DUO-LCD *TWIN AUTOMATIC TAP TIMER*


Your Pope® **Simple Set Duo-LCD** Twin Automatic Tap Timer is two independent tap timers in one unit. It gives you the ultimate flexibility in set and forget garden watering for two areas of your garden.



Key features:

- Easy to use
- Two independent tap timers in one compact unit
- Connects straight to the tap
- Simple to install
- Up to 16 different start times per program
- Guaranteed for 12 months
- Runs on 2 x AA alkaline batteries (no wiring required)
- Includes tap adaptor, to fit 3/4" and 1" taps
- Durable body

Pope® Simple Set Duo-LCD Twin Automatic Tap Timer

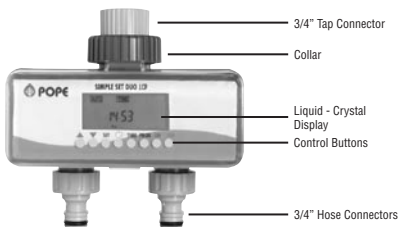

Control Key Definitions

▼ Or ▲ Advance or reverse key
(eg setting hours, minutes, programs etc)

L — Display current time.

SET — Confirm input data

TIME — Set current time and day

PROG — Set Watering Program (1 – 16)
or review watering program data

PROG OFF (Together) Erase all

ON — Manual open key

OFF — Manual close key

HOW TO INSTALL

1. Install 2 new AA ALKALINE Batteries in the battery compartment
(Using old batteries will decrease the overall operational time of the timer).
2. Set the current time and day, and programs before installation
(see operating instructions)
3. Fit the 3/4" tap connector or the included 1" adaptor to your garden tap.
If using the 1" tap adaptor, attach directly to the tap.
4. Loosen the collar until the fitted 3/4" tap connector is loose.
Then holding the timer steady with one hand, fit to the tap
5. Hand tighten the collar until secure. Do not over tighten.

Operating Instructions

SET CURRENT TIME AND DAY

 
(The Pope **Simple Set Duo**-LCD Twin Automatic Tap Timer uses a 24 hour clock)

Set hour:

1. Press 
2. Press  or  to set hour.

The hour will flash
Adjustment range: 0 – 23


Press  when correct.



Set minutes

3. Press  or 
- The minute range will flash
Adjustment range: 0 – 59

 
Press  when correct.



Set day


4. Press  or 

 The weekday selection will flash
Sunday, (Su) Monday (Mo), etc

Press  when correct.



 5. The AUTO display comes on.



SET WATERING PROGRAM FOR OUTLET 1

1. Press **PROG**



2. Press **▲** or **▼**

Choose the desired program. Adjustment range: 1 – 16

Press **SET** to confirm the selected program. START TIME hour will flash

SELECT START TIME

3. Press **▲** or **▼**



Choose the hour to START watering
Adjustment range 0 – 23 hours

Press **SET** to confirm the START TIME hour. The minute range will flash

4. Press **▲** or **▼**



Choose the minute to START watering
Adjustment range 0 – 59 minutes

Press **SET** to confirm the START TIME minutes. The run time range will flash

5. Press **▲** or **▼**



Choose how many hours run time for
the program. Adjustment range 0 – 9

Press **SET** to confirm the hours set for the run time. The minutes will flash

6. Press  or 

Choose how many minutes to run the program. Adjustment Range 0 – 59 minutes






Press  to confirm the minutes set for the run time. The 2nd symbol (for watering days/frequency) will flash

7. Press  or 

 


Choose between watering days or frequency. Every 2nd day watering is automatically selected and will flash.



2nd = waters every second day eg Sunday, Tuesday, Thursday and Saturday appears.





If correct move to  press  or press  to change.

3rd = waters every third day eg Sunday, Wednesday, Saturday appears.

If correct move to  press  or press  to change.

To select watering days

 Press  on flashing day to select day,


and  or  to move between days. More than one day can be chosen. When complete move to  and press 

Outlet 1 will begin to flash

8. To select outlet 1 Press 

To select outlet 2  then press 



Press  to return to the current time.

Repeat steps 2 through 8 for additional programs

To review set programs

1. Press **PROG**
2. Press **▲** or **▼** to review each program.



Press **L** to return to the current time

MANUAL OPERATION

You can bypass the programs set in your Pope® **Simple Set Duo-LCD** Automatic Tap Timer by using manual operation.

To Set Manual On (for water flow)

1. Press **ON**
2. Press **▲** or **▼**



RUN TIME hour of watering will flash
Adjustment range 0-9 hours

Press **SET** to confirm the hours set for run time. The minutes of run time will start to flash

 
3. Press **▲** or **▼**

RUN TIME minutes of watering will flash
Adjustment range 0-59minutes

Press **SET** to confirm the minutes set for run time. The outlet selection will start to flash.

4. To select outlet 1 press **SET**
To select outlet 2 press **▼** then **SET**
Water flow will commence for the RUN TIME selected

5. Press **OFF** to stop water flow.



Low battery indicator

When the battery is running low an indicator will appear and the valve will automatically close.



Technical Specifications

Water pressure:	Maximum up to 600 kPa. If operating in a higher water pressure area, use a pressure reducer.
Temperature:	Max 60° C
Batteries:	2 x AA Alkaline

Use with cold water only

Trouble shooting

- Check batteries – if batteries are running low the valve will close automatically
- Ensure that programs have been set correctly and that there is no overlap
- Make sure the tap is turned on



Guarantee

This Pope® product has a 12 month warranty against defects in materials and workmanship when used in normal home garden watering applications.

The Pope® **Simple Set Duo-LCD** Automatic Tap Timer will operate in pressures up to 600 kPa.

Use a pressure reducing device in higher pressure areas. Use of this product under these conditions without a pressure reducer will void the warranty.

Disassembling of this product will also void the warranty.



Pope® is a Registered Trademark of
Toro Australia Pty Limited
53 Howards Road, Beverley SA 5009

